



3

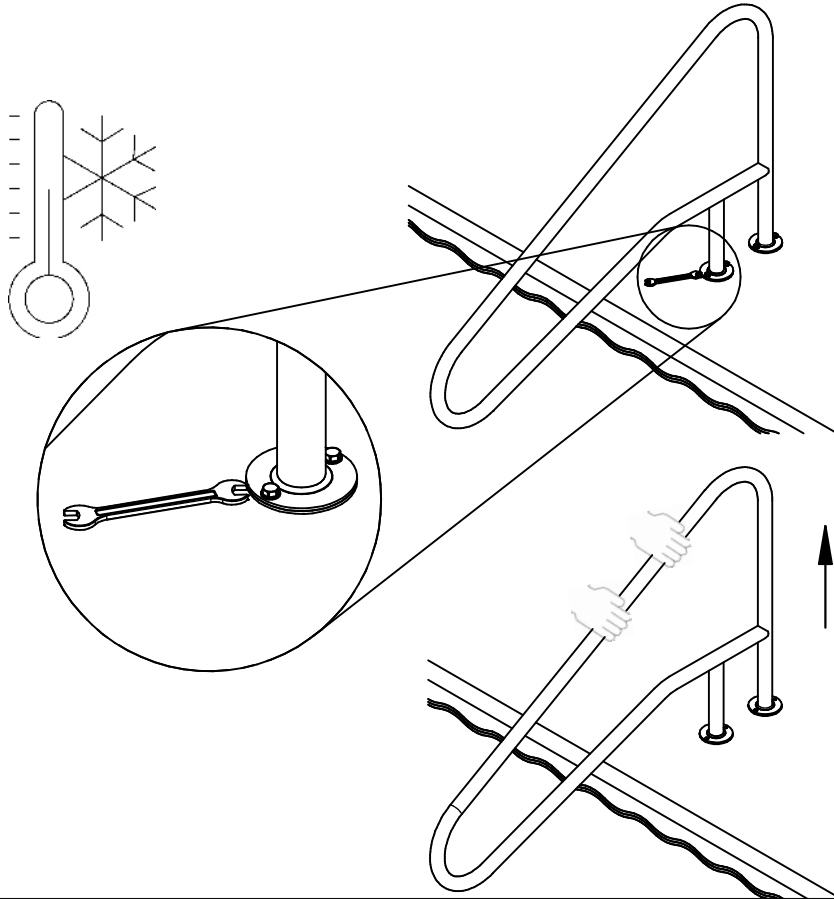

4

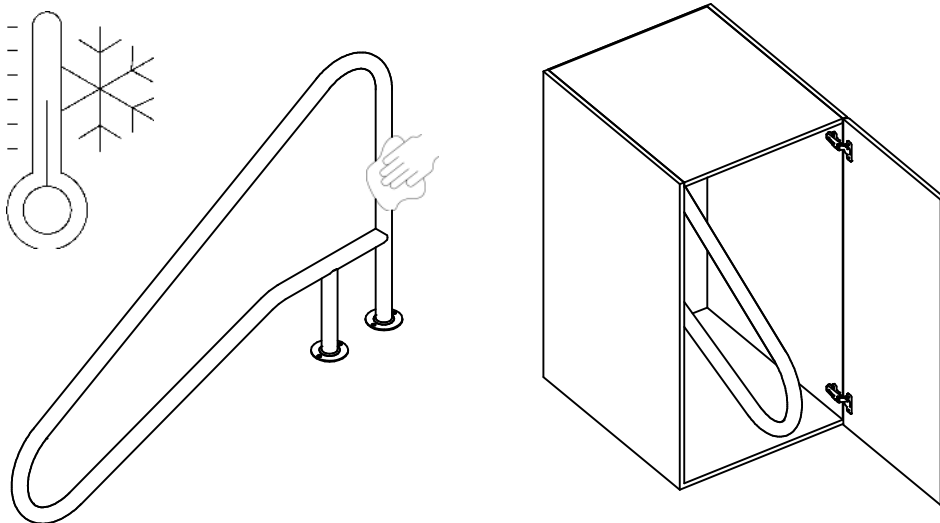

09940675









INSTRUCCIONES DE MONTAJE
 BARANDILLA FX - 02 / PLETINA SOLDADA

ASSEMBLY INSTRUCTIONS
 HANDRAILS FX - 02 / WELDED FLANGE


INSTRUCTIONS DE MONTAGE
 SORTIES DE BAIN FX - 02 / PLETINE SOUDÉE

MONTAGEANLEITUNGEN
 HALTEGRIFFE FX - 02 / GESCHWEIßTE FLANSCH



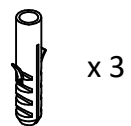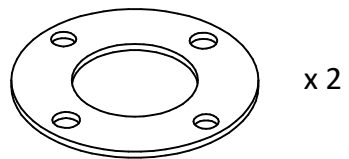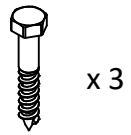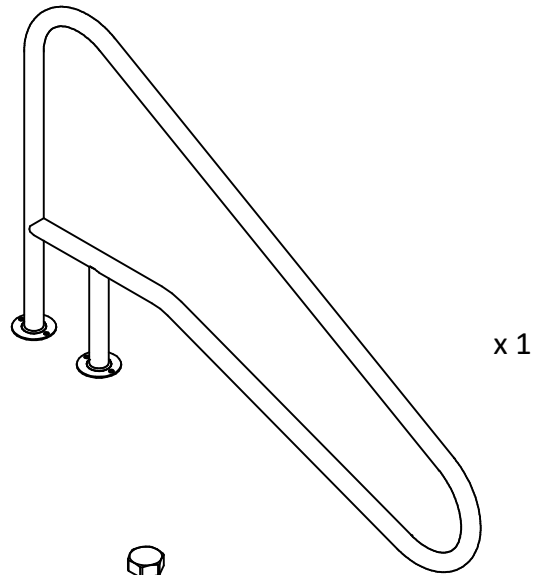

1

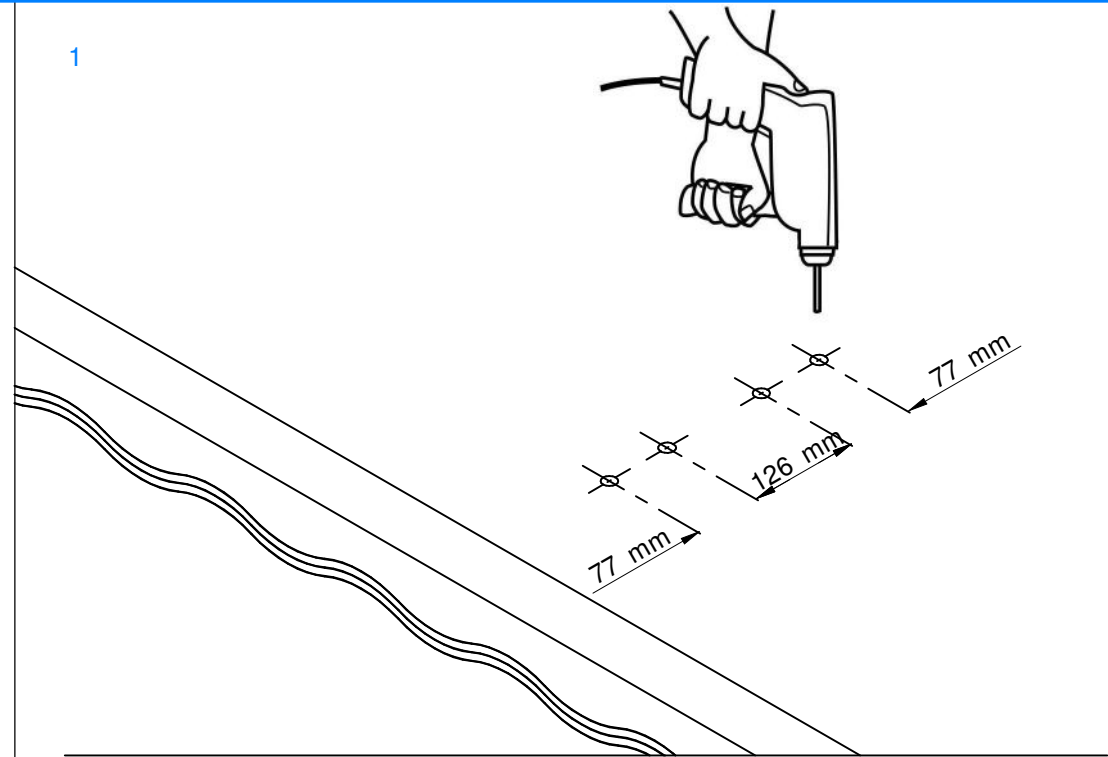

2

